


## 1. Upgrade Firmware:

Upgrade “Firmware 1” first, and then upgrade “Firmware 2”.

- 1) Go to “Configure> System Tools”, select .



- 2) Click on “Browse...”, select the firmware file, click OK, then wait for upgrading finished.

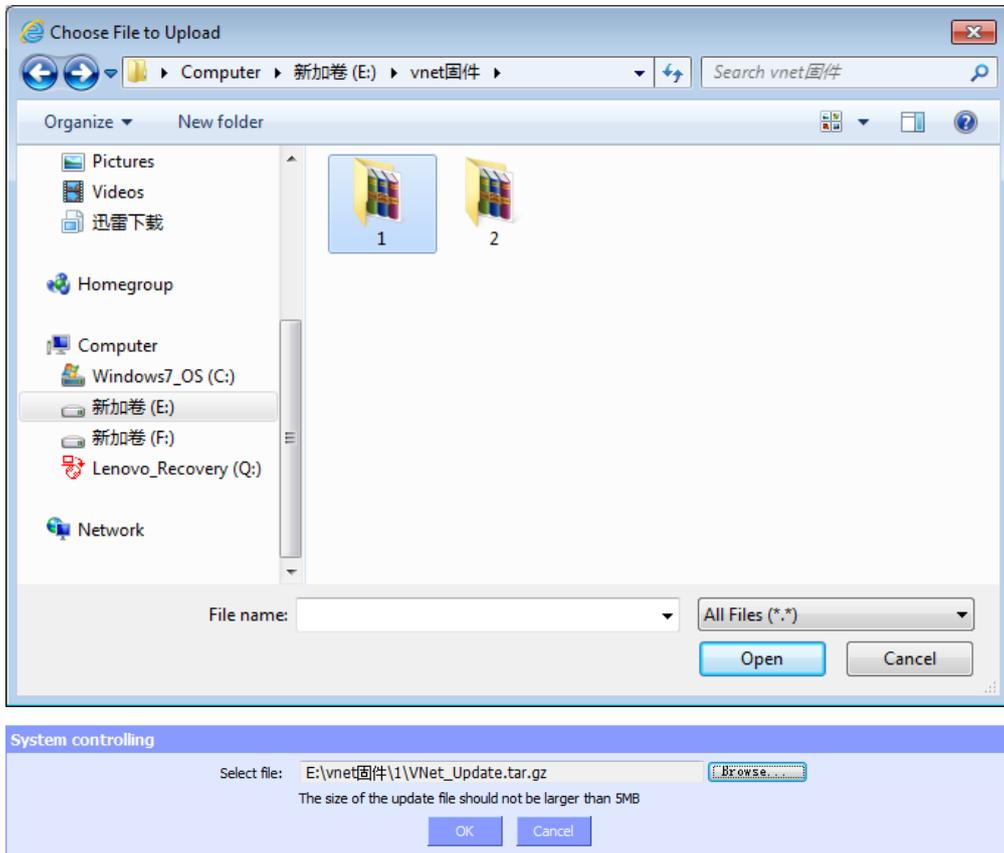

*Tips: Upgrade “Firmware 1” first, and then upgrade “Firmware 2”.*