## Serial port modification for establishing connection


### between TS and PC

This operation is used to modify the port when the current port is pccupied.

Step 1



#### Step 2

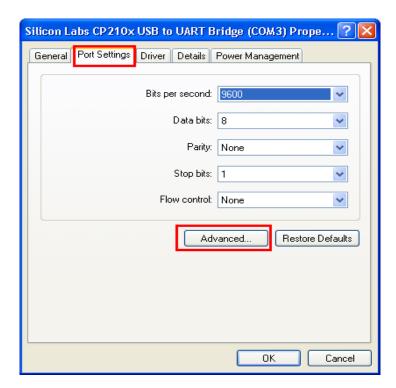

# Η I • T Λ R G E T

#### Step 3,

Change the serial ports in the red frame in the interface below.

| Advanced Settings for COM3   | ? 🗙                      |
|--|--------------------------|
| <ul> <li>✓ Use FIFO buffers (requires 16550 compatible UART)</li> <li>Select lower settings to correct connection problems.</li> <li>Select higher settings for faster performance.</li> <li>Receive Buffer: Low (1)</li> <li>Transmit Buffer: Low (1)</li> <li>High (16)</li> </ul> | OK<br>Cancel<br>Defaults |
| COM Port Number:   |                          |