1. Tool->Data Import

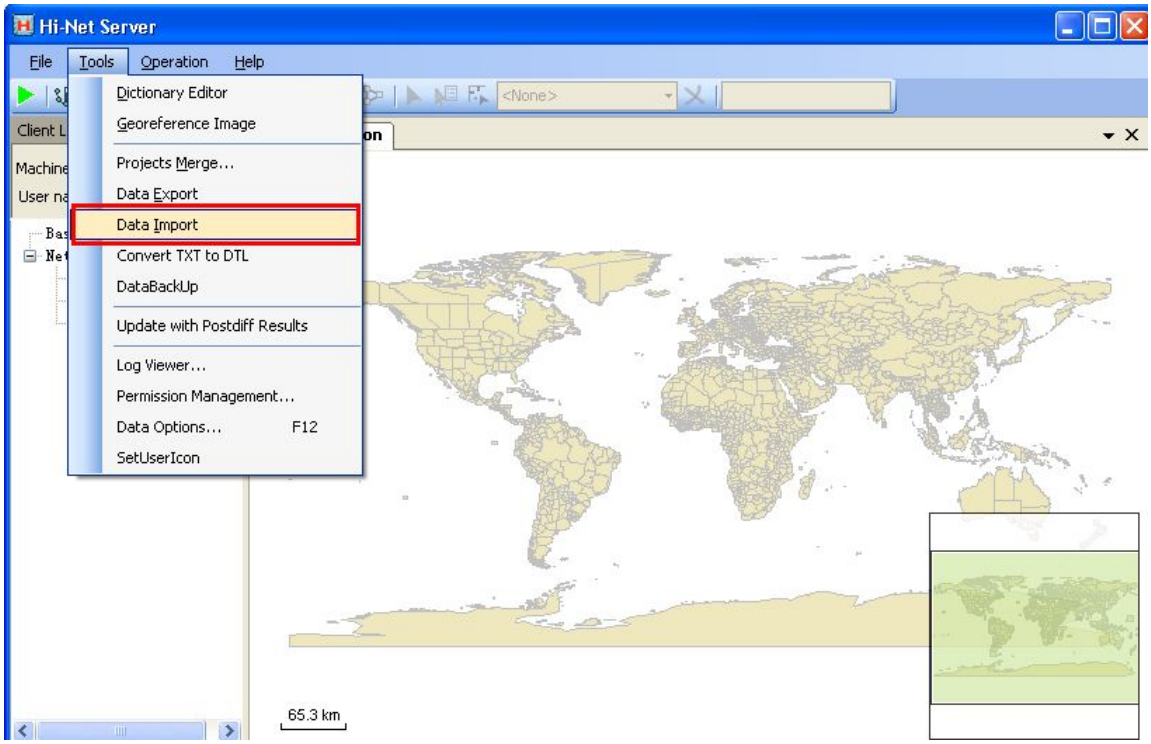

2. Click Add->change (define the saving path)->Next

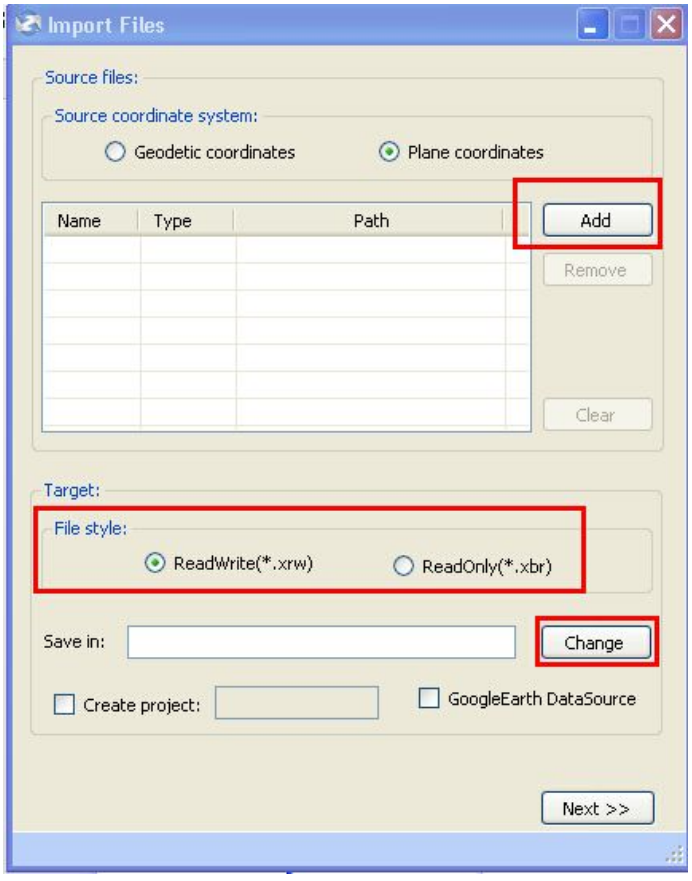

3.Choose coordinate system. “Add Predefined” means you can use the one that you have defined. Then click “OK”

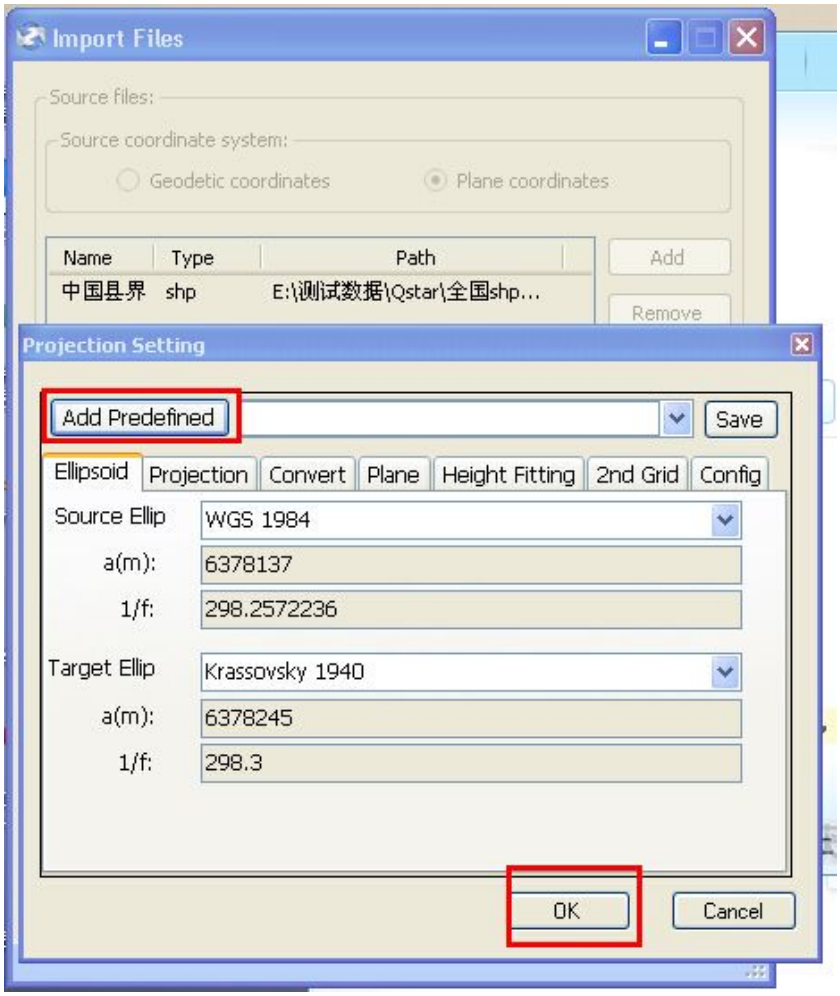

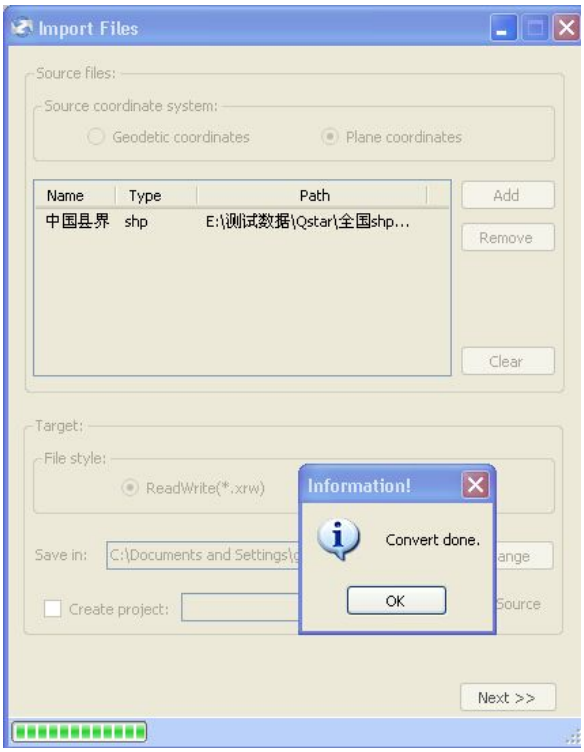

Then you have successfully finished the conversion.

4. Open the xbw file in Hi-Q. Click project(88 project for example)->Open file

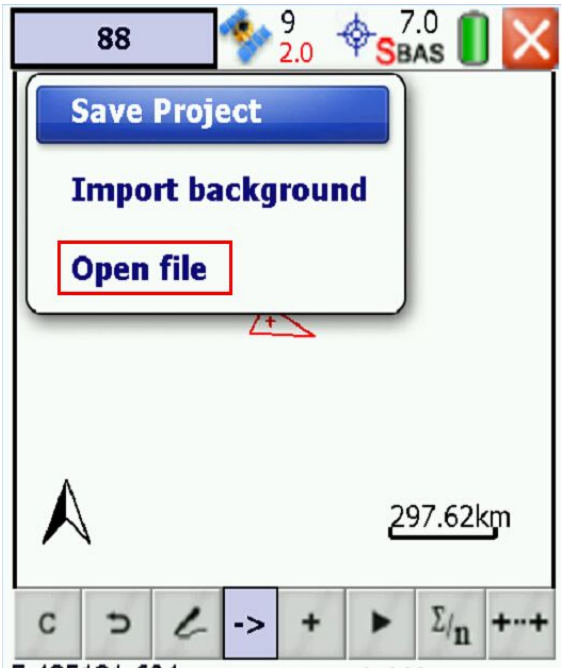

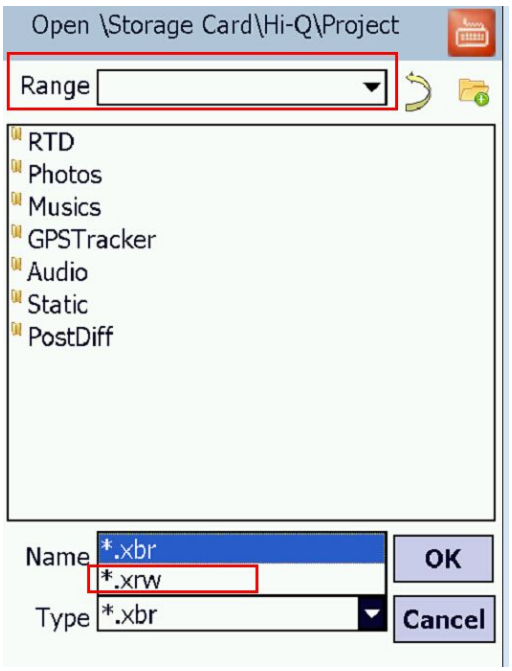

5. Find your .xbw file.

6. Then you finish.

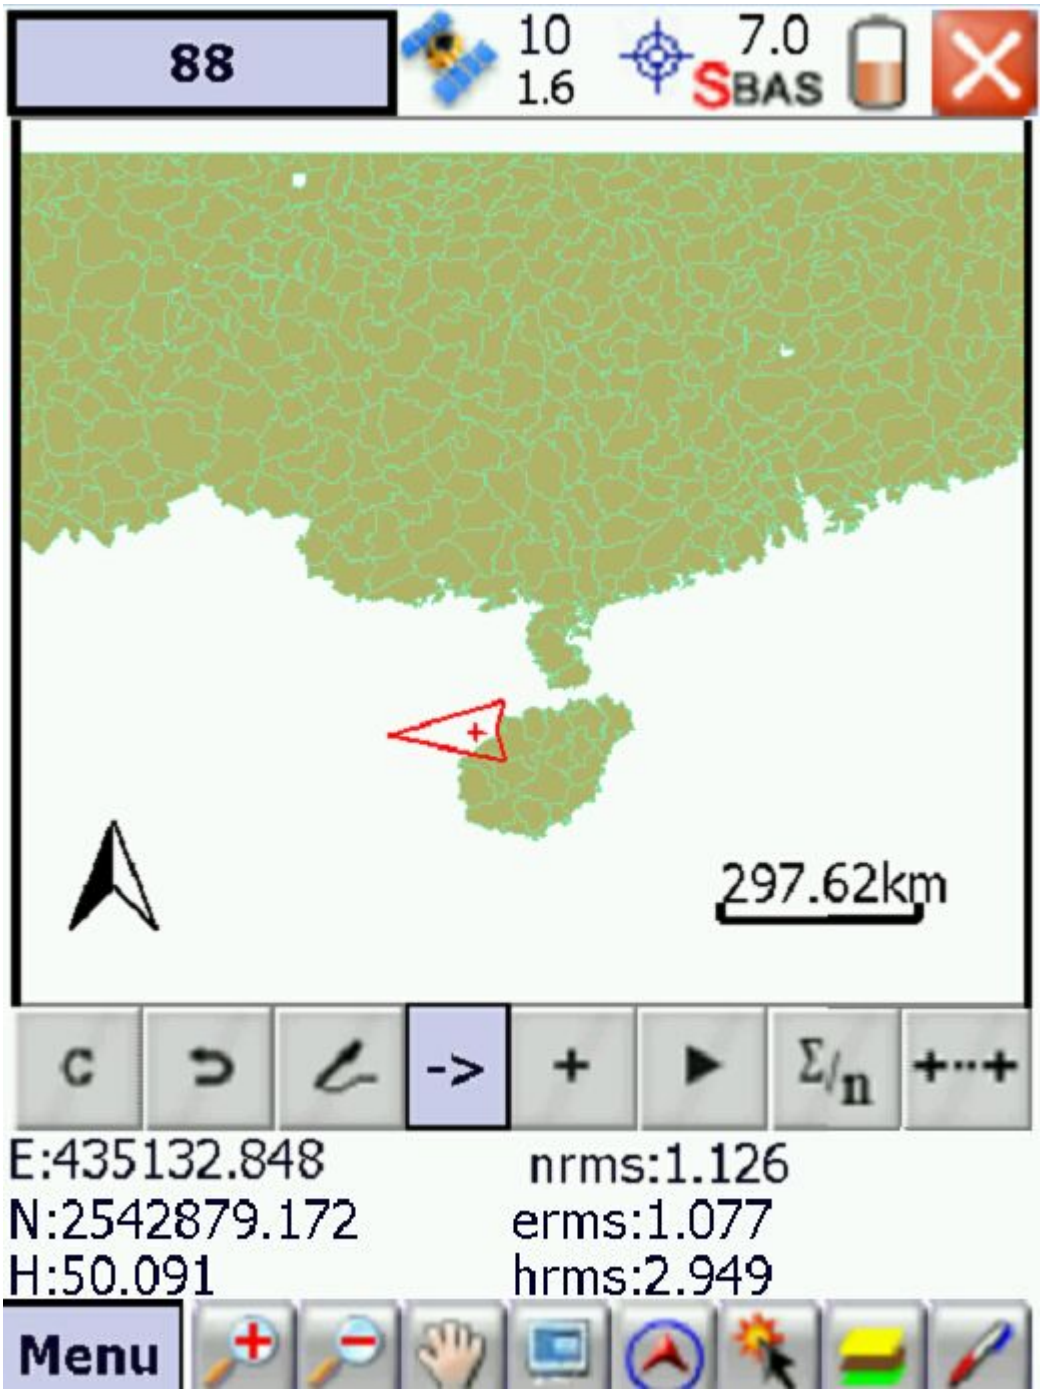
88
10
1.6
7.0
SBAS
297.62km
E:435132.848
N:2542879.172
H:50.091
nrms:1.126
erms:1.077
hrms:2.949
Menu